
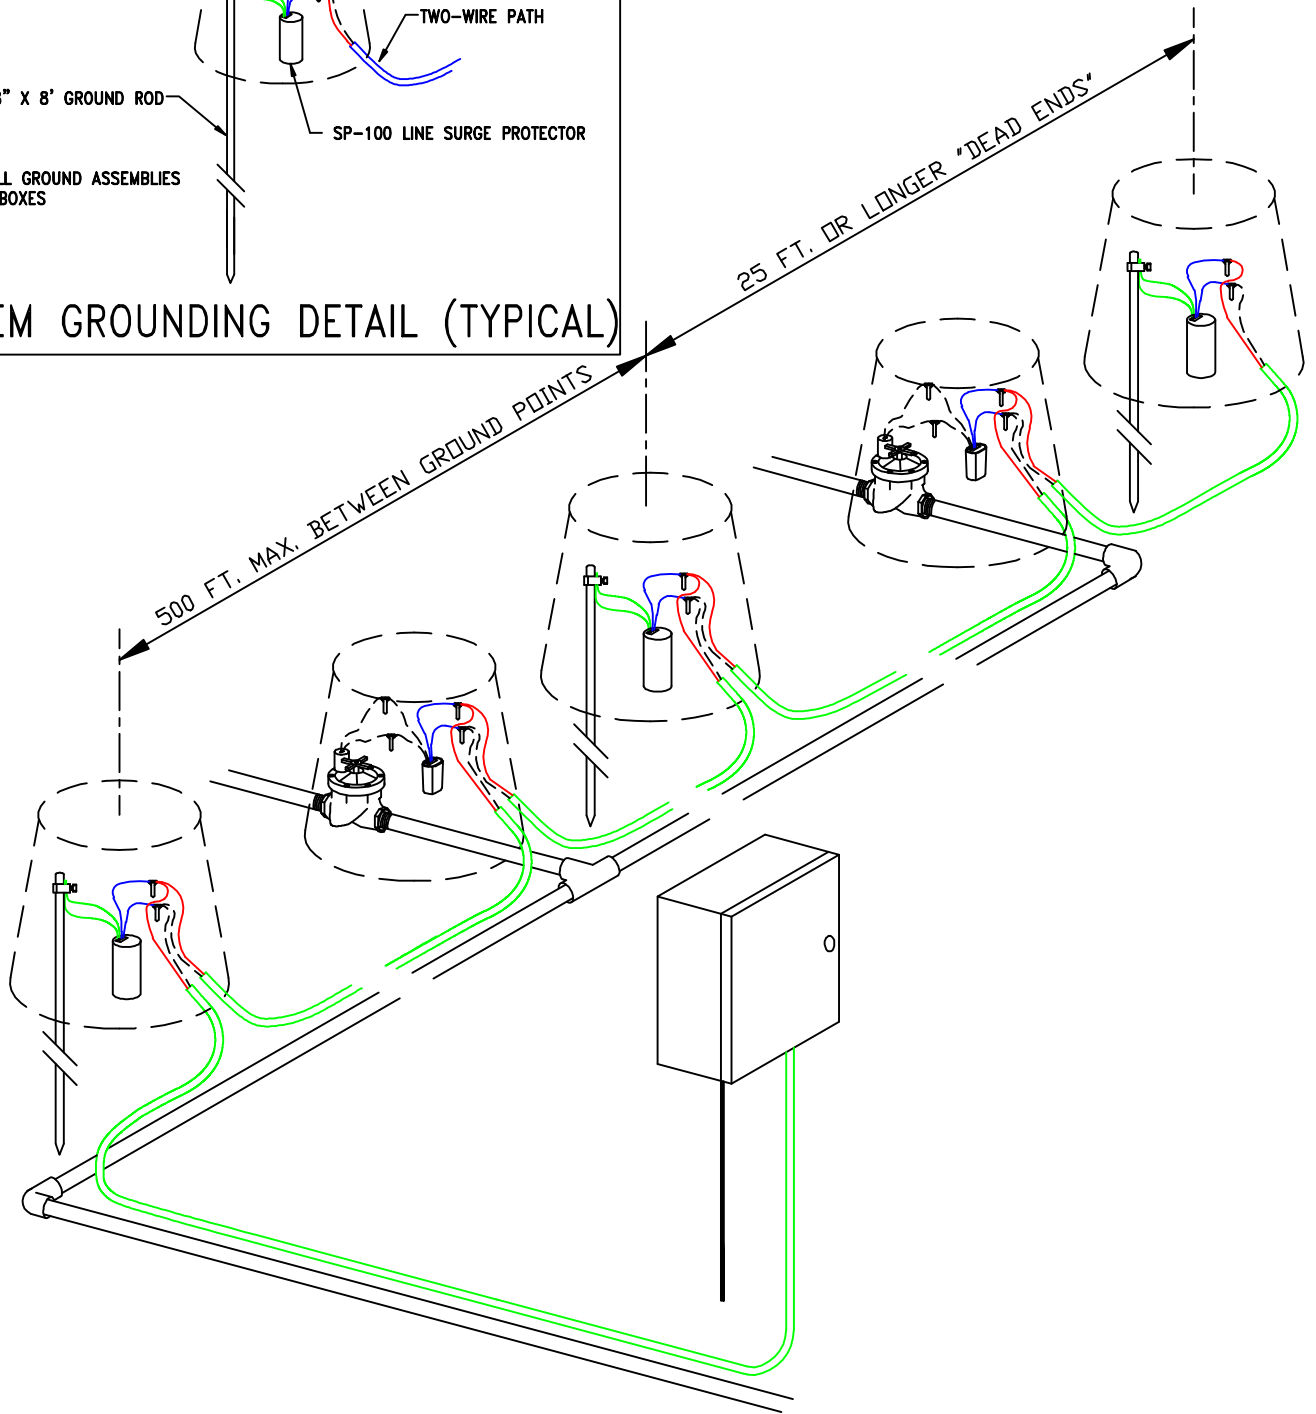


NOTES:

1. ALL WIRE CONNECTION SHALL BE MADE WITH APPROVED CONNECTORS.
2. MAKE ALL WIRE SPLICES IN VALVE BOXES.
3. LEAVE A MINIMUM OF 12" EXTRA WIRE AT ALL SPLICE POINTS.
4. TEST EARTH TO GROUND RESISTANCE AT ALL GROUND POINTS.
5. EARTH TO GROUND RESISTANCE MUST BE LESS THAN 50 OHMS.

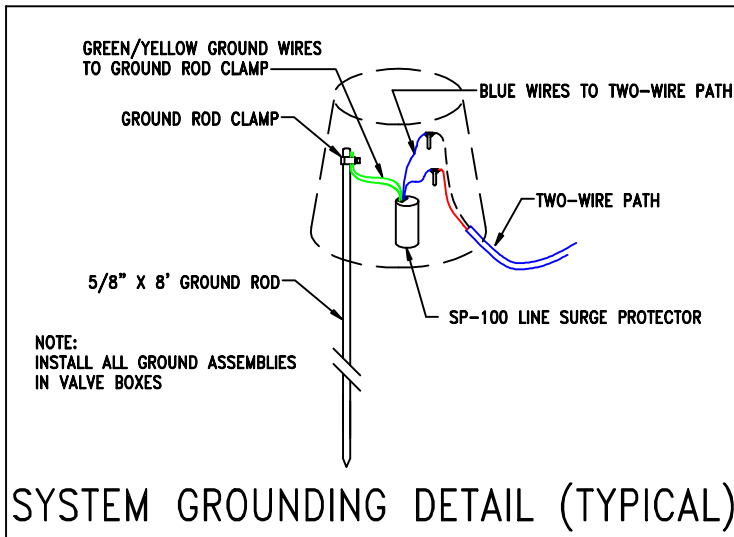

○ RKD
Scale: No Scale

SYSTEM GROUNDING (TYPICAL)